




INSTALLATION MANUAL



BALDR L.



AC220-240V | 50/60Hz | IP20 | Die cast

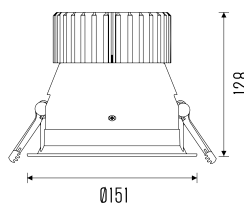

Do not operate with power supply connected.

1	2 Open a 140mm diameter hole in the ceiling.	3 Connect the power supply (AC220-240V).
4 Pull on the sketch clamp along the arrow direction.	5 Clip upward and place the product in the hole in the ceiling.	6 The installation is complete.
7 Switch on the power, lighting.	8	

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.