





INSTALLATION MANUAL

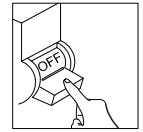

BALDR S.

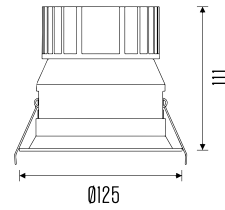

Do not operate with power supply connected.

AC220-240V | 50/60Hz | IP20 | Die cast



<p>1</p>	<p>2</p> <p>Open a 115mm diameter hole in the ceiling.</p>	<p>3</p> <p>Connect the power supply (AC220-240V).</p>
<p>4</p> <p>Pull on the sketched clamp along the arrow direction.</p>	<p>5</p> <p>Clip upward and place the product in the hole in the ceiling.</p>	<p>6</p> <p>The installation is complete.</p>
<p>7</p> <p>Switch on the power, lighting.</p>	<p>8</p>	

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.